



Gateway NV52 Hard Drive Replacement

This guide will instruct you on how to successfully remove the Hard Drive.

Written By: Irma Marin



INTRODUCTION

There will be prerequisites that you need to be complete before displacing the Hard Drive. The prerequisites are available to you in the repair guide manual.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Base Cover



- Remove the five identical 3/16" Phillips screws that secures the hard drive and memory cover using a Phillips #0 Screwdriver.

Step 2



- Lift up the base cover from the the top with your hands to a 90 degree angle.
- Remove the base cover and place it in a safe and dry place.

Step 3 — Hard Drive Compartment



- Remove the 1/4" Phillip screw located at the top right of the Hard Drive using a Phillips #0 Screwdriver.

Step 4




- Remove the Hard Drive component from its compartment. To do so, slide the component downward away from the battery pack.
- Lift the Hard Drive to a 90 degree angle and out of its slot.
- Place the Hard Drive in a designated zone.

Step 5 — Hard Drive



- Remove the four identical 1/8" Phillip screws located in every corner of the Hard Drive using the Phillips #0 Screwdriver.

Step 6

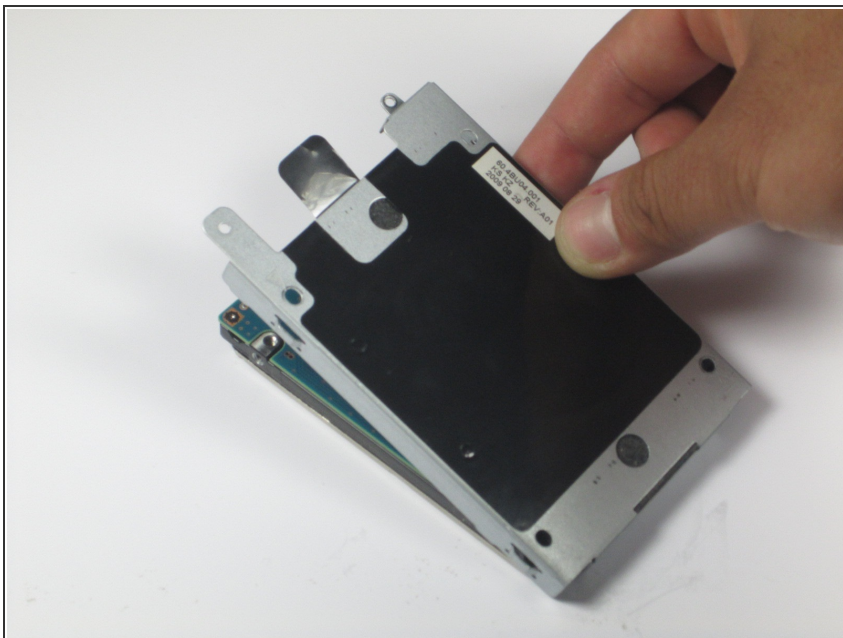

- Access to the Hard drive by gently sliding the metal cover away from the Hard Drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 11:22:56 AM.